


Tip:
Drill 1/8" pilot hole, then use a "paddle bit" to drill the larger hole. Drill half way through from the front then finish from the back to prevent tear-out.

1" DIA

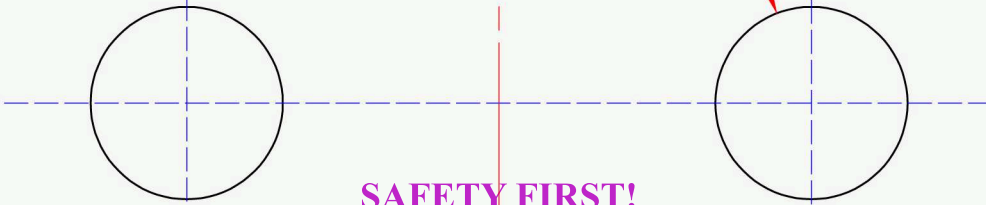

SAFETY FIRST!
Fiberglass is nasty stuff! Wear a dust mask when drilling and cutting fiberglass.

<----- Cut for Bezel Opening ----->

Chest Hole Template for v2 (or any Torso)

by Craig Reinbrecht

Tip:
Cut using sabre saw with a "grit" blade". Clean up the cut with a large file

11"
16" DIA

